




CAM.UNI-010.

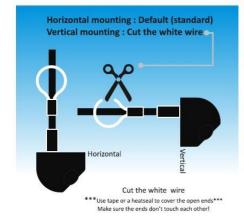

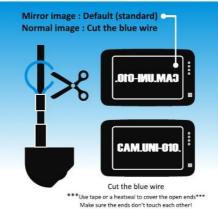

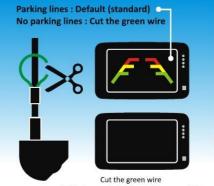



Use tape or a heatseal to cover the open ends
Make sure the ends don't touch each other!